

Adjustable pole hoop



Usage:

set on the existing mast anchor contacts.

Note:

Common anchored fixtures.

Operating essentials:

According to wire diameter of legs to adjust the hoop circumference of the gap distance is about 20 ~ 30mm, and then bolts.

With the T-socket wrench can be firmly fixed bolts.



应用实例



$\Phi 130\text{mm} \sim \Phi 150\text{mm}$

